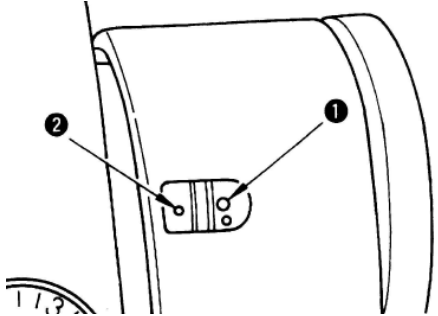
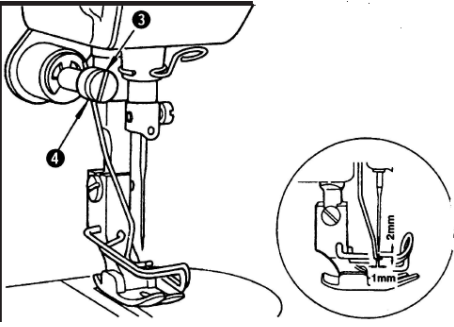
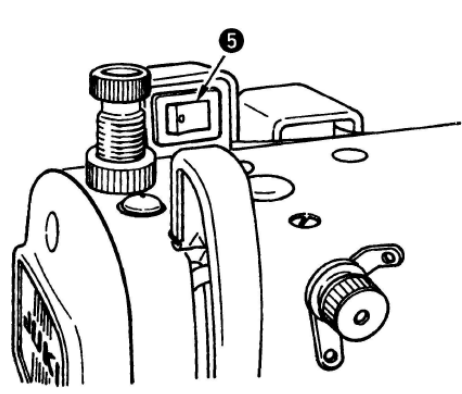


APPLICATION ACTIVITY

Adjusting the Thread Trimming on the Machine

Process steps	Suggestions
<p>➤ Adjustment of Thread Trimming Start the machine. Make sure the thread trimming mechanism is on.</p>	<p>➤ Switch 5 must be on.</p>
<p>➤ When the set point 1 on the handwheel coincides with the red point 2 of the machine, adjust the wrench 4 so that it is 2 cm below the end of the needle by loosening the screw 3 and adjust the distance between the flat part of the trimming wire and the center of the needle by 1 cm.</p> <p>With key 5, the trimming mechanism can be deactivated if necessary.</p>	  
<p>➤ Run the machine to try.</p>	