


3.1.2. Upper Machine Section Elements and their functions

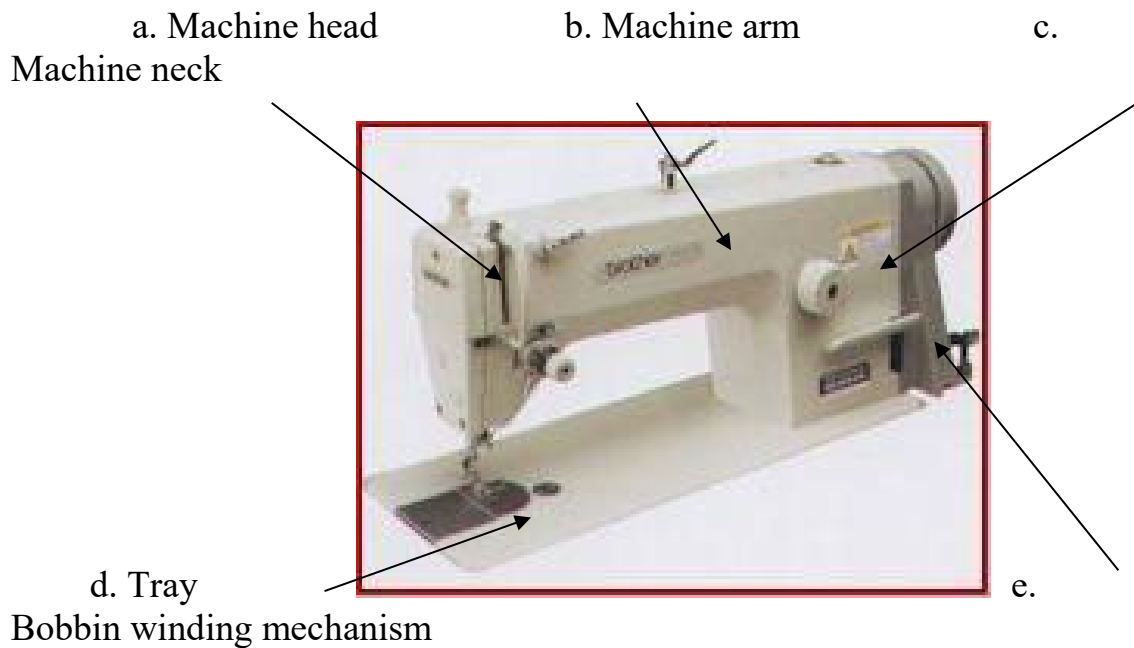

Picture 3.2. Upper Machine Section Elements


Machine Head: Tension, tension spring, presser foot, needle thread transmitter and their movement shafts.

Machine Arm: It is the section where the arm shaft is provided to transfer the movement.

Machine Neck: The forward and reverse dial is the part of the sewing length adjuster and handwheel.

Tray: The table base plate is used as a cloth insert. The sewing plate is on the base plate. Bottom stitch formation elements and carrier movement mechanism are located under this tray.

Bobbin winding mechanism: It is a mechanism to wrap the bobbin properly.

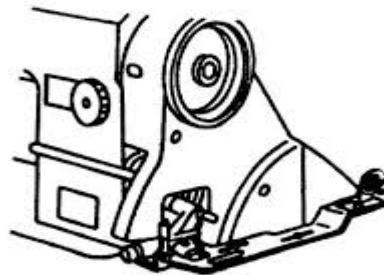

Picture 3.3. Bobbin winder

