



3.1.7.3 Adjustment of Upper Thread Tension

The thread tensioner on the machine head is tightened or softened to adjust the tension of the upper thread. (B) It should be noted that the thread is passed between the opposite tension pressure flanges (5).

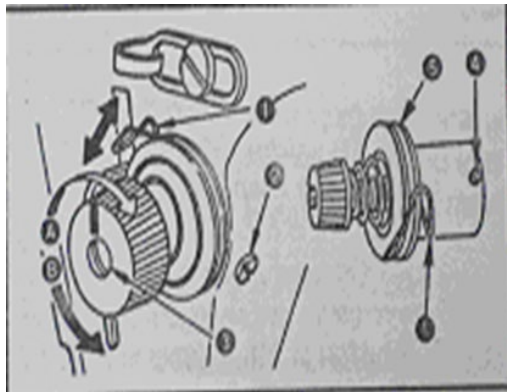

Picture 3.10.

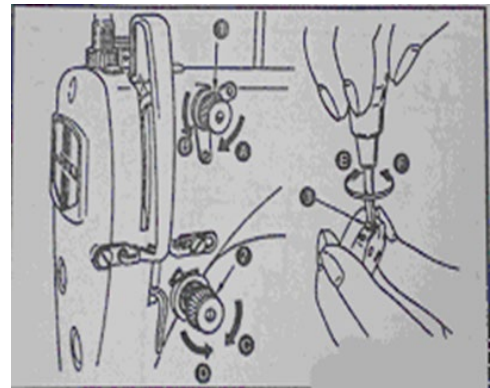

Picture 3.11.